

SWITCH ON AX1



RESET AX1
(Hold down the button for 5 seconds)



BLUE MODE
(Hold down the button for 3 seconds)



PAIR W/TRANSMITTER
(Press the RED or GREEN button on DMX transmitter shortly)



DMX PROFILE: 16x RGB
PROFILE: RGB RGB SS
PIXELS: 16
STROBE: OFF
DMX FAIL: OFF
AC FAIL: IGNORE
DIMMER CURVE: STANDARD
(*) Press button to cycle through the available DMX addresses

Tube color	Address (*)
	1
	49
	97
	145
	193
	241
	289
	337
	385
	433



DMX PROFILE: 1x RGB
PROFILE: RGB RGB SS
PIXELS: 1
STROBE: OFF
DMX FAIL: OFF
AC FAIL: IGNORE
DIMMER CURVE: STANDARD
(*) Press button to cycle through the available DMX addresses

Tube color	Address (*)
	1
	4
	7
	10
	13
	16
	19
	22
	25
	28
	31
	34
	37
	40
	43



DMX PROFILE: 1x RGB CCT DIM IND
PROFILE: RGB CCT DIM IND
PIXELS: 1
STROBE: OFF
DMX FAIL: OFF
AC FAIL: IGNORE
DIMMER CURVE: STANDARD
(*) Press button to cycle through the available DMX addresses

Tube color	Address (*)
	1
	7
	13
	19
	25
	31
	37
	43
	49
	55
	61
	67
	73
	79
	85



DMX PROFILE: 16x RGB CCT DIM IND
PROFILE: RGB CCT DIM IND
PIXELS: 16
STROBE: OFF
DMX FAIL: OFF
AC FAIL: IGNORE
DIMMER CURVE: STANDARD
(*) Press button to cycle through the available DMX addresses

Tube color	Address (*)
	1
	97
	193
	289
	385